
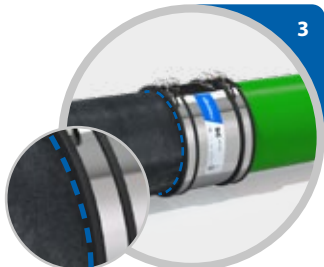
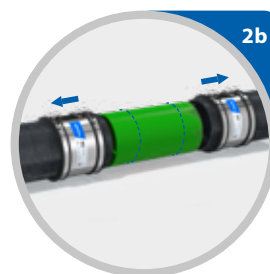


Installation:

Shear Banded Coupling Type 2A & 2B

analogue for: TC, SC, EWC, LC, EWLC and MAG

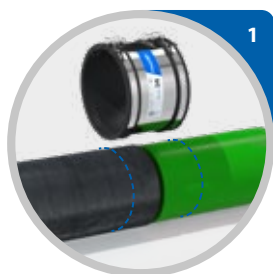

1. Mark both pipes, from the end to be connected, half the width of the coupling, less the required joint gap, which is usually 10mm.
- 2a. Slide the coupling fully over one of the pipes.
- 2b. If replacing a cut section of pipe, slide both couplings over each of the existing drain pipes.
3. Align the pipes and slide the coupling onto the other pipe, ensuring the coupling face and marked line are flush. Tighten this clamp band.
4. Position the second pipe, ensuring the coupling face and marked line are flush. Tighten this clamp band.
5. Starting with the shear band (**MAG**: start with the central shear band lock), tighten all clamp bands to the recommended torque (see data sheet) in sequence across the width of the coupling. Tamp the bedding under the pipe and re-tighten the coupling before backfilling.



Data Sheet available online at:
fernco.de/en/product/typ-2a-for-clay-pipes
fernco.de/en/product/typ-2b-for-all-pipes



SC Installation video:
qrco.de/bfGimp